

# HAKKO FX-951

SOLDERING STATION

High-output, temperature controlled soldering station

## Instruction Manual

Thank you for purchasing HAKKO FX-951 soldering station.


Please read this manual before operating the HAKKO FX-951.

Keep this manual readily accessible for reference.

### 1. PACKING LIST AND PART NAMES

Please check to make sure that all items listed below are included in the package.

HAKKO FX-951 soldering station	1	Heat resistant pad	1
HAKKO FM-2028 soldering iron	1	Iron holder	1
Control card	1	Connecting cable	1
Power cord	1	Instruction manual	1

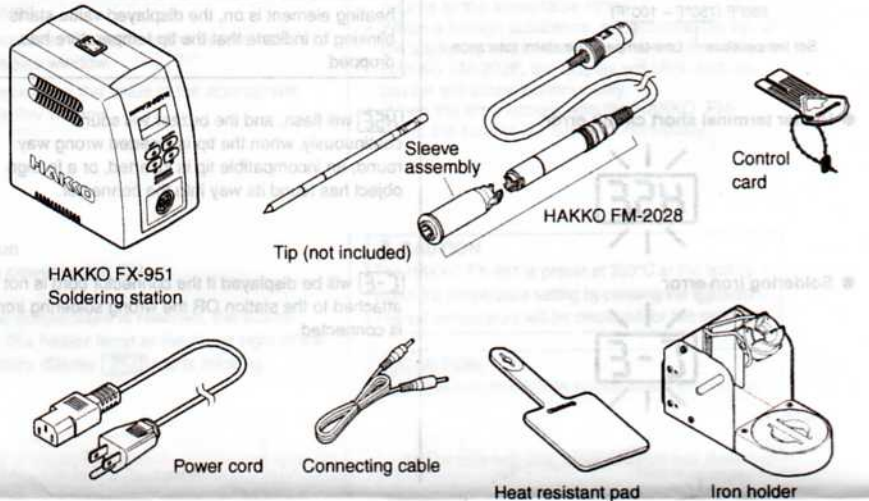

### 2. SPECIFICATIONS

#### HAKKO FX-951 soldering station

Power consumption	75 W
Temperature range	200 - 450°C (400-840°F)
Temperature stability	±5°C (±9°F)

#### ● Station

Output	24 V
Dimensions	80 (W) × 130 (H) × 131 (D) mm
Weight	1.2 kg

#### ● HAKKO FM-2028 soldering iron

Power consumption	70 W (24 V)
Tip to ground resistance	< 2 Ω
Tip to ground potential	< 2 mV
Length of cord	1.2 m (4 ft.)
Length, (w/o cord)	188 mm (7.4 in.) with 2.4D tip
Weight, (w/o cord)	30 g (0.07 lb.) with 2.4D tip

#### NOTE:

The temperature were measured using the HAKKO 191 or FG-100 thermometer.  
This product is protected against electrostatic discharge.

#### ⚠ CAUTION

This product includes such features as electrically conductive plastic parts and grounding of the handpiece and station as measures to protect the device to be soldered from the effects of static electricity. Be sure to observe the following instructions:

1. The handle and other plastic parts are not insulators, they are conductors. When replacing parts or repairing, take sufficient care not to expose live electrical parts or damage insulation materials.
2. Be sure to ground the unit during use.

Specifications and design are subject to change without notice.

### 3. WARNINGS, CAUTIONS AND NOTES

#### ⚠ WARNING

Warnings, cautions and notes are placed at critical points in this manual to direct the operator's attention to significant items. They are defined as follows:

- ⚠ **WARNING:** Failure to comply with a WARNING may result in serious injury or death.
- ⚠ **CAUTION:** Failure to comply with a CAUTION may result in injury to the operator, or damage to the items involved. Two examples are given below.
- NOTE:** A NOTE indicates a procedure or point that is important to the process being described.
- EXAMPLE:** An EXAMPLE is given to demonstrate a particular procedure point or process.

#### ⚠ CAUTION

When power is ON, tip temperatures will be between 200°C and 450°C. (392°F to 840°F.) To avoid injury or damage to personal and items in the work area, observe the following:

- Do not touch the tip or the metal parts near the tip.
- Do not allow the tip to come close to, or touch, flammable materials.
- Inform others in the area that the unit is hot and should not be touched.
- Turn the power off when not in use, or left unattended.
- Turn the power off when changing parts or storing the HAKKO FX-951.

To prevent accidents or damage to the HAKKO FX-951, be sure to observe the following:

- Do not use the HAKKO FX-951 for applications other than soldering.
- Do not allow the HAKKO FX-951 to become wet, or use it when hands are wet.
- Do not modify the HAKKO FX-951.
- Use only genuine HAKKO replacement parts.
- Do not bend or damage the control card. If the card does become damaged, do not force the card into the station slot.
- Do not strike the iron against hard objects to remove excess solder. This will damage the iron.
- Be sure the work area is well ventilated. Soldering produces smoke.
- While using HAKKO FX-951, don't do anything which may cause bodily harm or physical damage.

### 4. INITIAL SETUP

#### A. Iron holder


- Loosen the adjusting screws to change the angle of the iron receptacle as you like, then tighten the screws.



⚠ **CAUTION**  
Do not set up the iron receptacle too high, the temperature of the soldering iron will become very hot.


⚠ **CAUTION**  
Do not lay down the iron receptacle too much, it can be easy to fall down.

- The sponge is compressed. It will swell when moistened with water. Before using the unit, dampen the sponge with water and squeeze it dry.
1. Put the small cleaning sponge in one of the five holes in the iron holder base.
  2. Add water to the iron holder base. The small sponge will keep the large sponge moist through capillary action.
  3. Wet the large sponge, squeeze it dry and put it on the iron holder base.

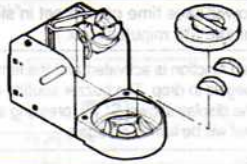

⚠ **CAUTION**  
Using the sponge without dampen with water may damage the tips.

- Use of the sleep function  
When using the sleep function, insert one end of the connecting cable into the jack at the back of the iron holder and the other end into the jack at the back of the soldering station to connect them.

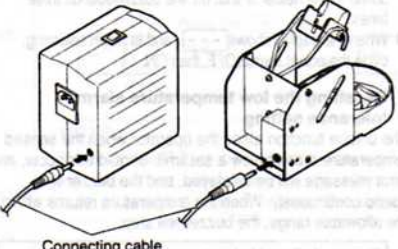

⚠ **CAUTION**  
Be sure to turn off the power before connecting or disconnecting the connecting cable.

#### B. Handpiece cord assembly


- Pass the iron cord through the hole in the heat resistant pad.



#### C. Soldering station

⚠ **CAUTION**  
Be sure the power switch is OFF before connecting or disconnecting the soldering iron cord. Failure to do so may result in damage to the circuit board.

1. Insert the power cord into the receptacle at the back of the station.  
Insert the soldering iron cord into the receptacle at the front of the station.
2. Set the iron in the iron holder.
3. Plug the power cord into a grounded wall socket.

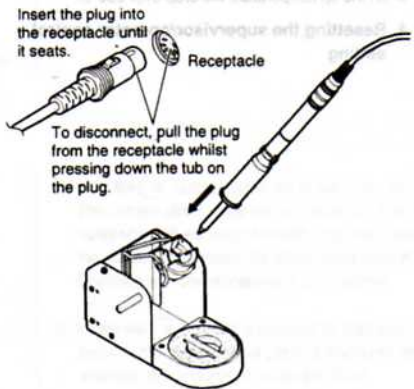


⚠ **CAUTION**  
The HAKKO FX-951 is protected against electrostatic discharge and must be grounded for full efficiency.

# 5. OPERATION

## Controls and displays

### Controls

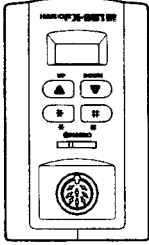

The front panel of the HAKKO FX-951 soldering station has the following controls:

- Four control buttons:
  - ☒ – Initiates a data entry mode.
  - ☑ – End of sequence signal (terminates a phase of a data entry mode); when pressed for less than one second, displays settings already stored.
  - ▲ – Increases the value in the appropriate display window.
  - ▼ – Decreases the value in the appropriate display window.

### ● Operation

1. Turn the power switch ON.
2. Once the temperature is reached, the buzzer sounds. The heater lamp at the lower right of the temperature display **350** starts blinking.

### ● Changing the temperature setting

Example: 350°C to 400°C

1. **Insert the control card into the slot in the front of the unit.**
  - The hundreds digit will begin to flash, indicating that the unit is in the TEMPERATURE SET mode and data may be entered.
2. **Entering the hundreds digit**
  - Press the ▲ or ▼ button to set the desired figure. Only 2, 3, or 4 can be selected. (In °F mode, 4, 5, 6, 7, or 8 can be selected.) When the desired figure is displayed, press the ☒ button to enter. The tens digit will begin to flash.
3. **Entering the tens digit**
  - Press the ▲ or ▼ button to set the desired figure. Any value from 0 to 9 can be selected. (In °F mode, the same value can be selected.) When the desired figure is displayed, press the ☒ button to enter. The units digit will begin to flash.
4. **Entering the units digit**
  - Press the ▲ or ▼ button to set the desired figure. Any value from 0 to 9 can be selected. (In °F mode, the same value can be selected.) When the desired figure is displayed, press the ☒ button to enter. The desired temperature is now entered into the system memory and heater control will begin.

**When the station is ON and the card is in the station, the data entry procedure follows:**

## Displays

The HAKKO FX-951 has a three-digit display element. Depending upon the selected mode, it will display:

- Normal mode:
  - Sensor temperature (tip temperature)
- Data entry:
  - Selected quantity (See 'data entry procedures' for exact characteristics.)
- Temperature scale:
  - °C or °F, depending upon selection
- Error detection:
  - Refer to 'ERROR MESSAGES' section.

In addition, heater lamps will flash when the station has reached the desired temperature, indicating that it is ready for use.

An audible buzzer is provided to alert the operator when:


- The station has reached the set temperature. The buzzer will sound once.
- When the low temperature threshold has been crossed, the buzzer will sound continuously. This buzzer will shutoff when the sensed temperature returns to the acceptable range.
- When a foreign substance, an incompatible tip, or the soldering end of the tip is inserted into the HAKKO FM-2028, the display will blink and the buzzer will sound continuously.
- When the error occurs with the HAKKO FM-2028, the buzzer will sound continuously.

### ⚠ CAUTION

The HAKKO FX-951 is preset at 350°C at the factory. Check the temperature setting by pressing the ☒ button. The set temperature will be displayed for two seconds.

### ⚠ CAUTION

Place the iron in the iron holder when not in use.

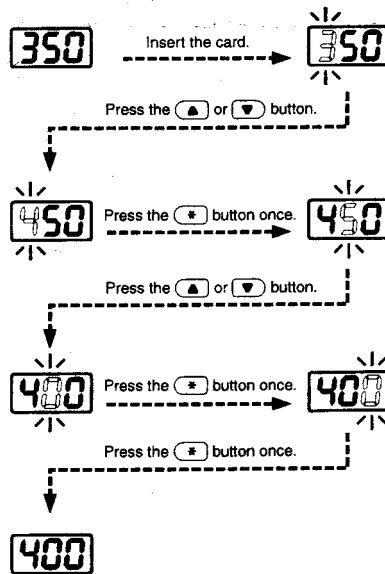

### NOTE:

If power is switched off or lost during the execution of this procedure, no data will be entered. The entire procedure must be repeated from step 1.

1. Hold the ☒ button down for at least one second. The current temperature setting will be displayed, then the hundreds digit will begin to flash. This indicates that the station has entered the temperature setting mode. Continue with the procedure of 2 - 4, above.
2. When the ☒ button is pressed for less than one second, the current temperature setting is displayed for two seconds, then returns to show the actual tip temperatures.

# 5. OPERATION

## ● Replacing the tip

### ⚠ CAUTION

The tip may be hot. Avoid holding the hot tip for a long time even if using the heat-resistant pad. Otherwise burns may result.

 
### Removing the tip:

Hold down the lock release buttons in the sleeve assembly, pull out the tip together with the sleeve assembly from the connector.


### ⚠ CAUTION

- Be sure to keep the lock release buttons held down while pulling out the sleeve assembly. Failure to do so will damage the locking mechanism.
- Be sure to pull out the tip only after separating the sleeve assembly from the connector. Otherwise, the sleeve assembly may fall down and break.


- Holding the front end of the sleeve assembly, pull out the tip.

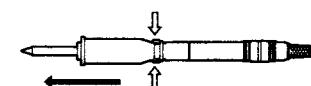

 Remove the tip from the connector while pressing this part.

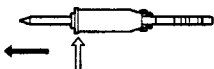

 
Hold the front part of the sleeve assembly to remove the tip.

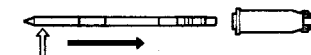

Hold this part to insert the tip into the sleeve assembly.

### ⚠ CAUTION

 When holding the head of the tip, there is a danger of burn. Be sure to use the heat-resistant pad.

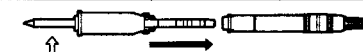

Hold this part to insert the tip into the connector.

### Inserting the tip:

Holding the front end of the tip, insert it into the sleeve assembly.

### ⚠ CAUTION

Insert the tip into the sleeve assembly until it clicks into place. When you hear it click, avoid forcing the tip into the sleeve assembly.

- Insert the tip securely into the connector.

### NOTE:

Improper insertion of the tip will cause **S-E** to appear on the display.

## ● How to enter the tip offset value into the HAKKO FX-951

### Example 1;

If the measured temperature is 410°C and the set temperature is 400°C, the difference is -10°C (need to decrease by 10°C). So, enter the figure which 10 is deducted from present offset value.

### 1. Insert the control card into the slot in the station.

- The station is in the temperature setting mode. The hundreds digit will begin to flash.

### 2. Press the **[\*]** button on the front panel.

- This will set the station to offset value entry mode.

### 3. Enter the offset value

The allowable ranges for offset values are from -50 to +50°C (In °F mode from -90 to +90°F).

### NOTE:

During offset data entry mode with blinking, the tip temperature is controlled by present offset value.

#### a. Entering the hundreds digit


- Press the **[▲]** or **[▼]** button to set the desired figure. Only 0 (plus) or - (minus) can be selected. (In °F mode, it is the same as °C mode). When the 0 (plus) or - (minus) is selected, press the **[\*]** button to enter. The tens digit will begin to flash.

#### b. Entering the tens digit

- Press the **[▲]** or **[▼]** button to set the desired figure. Any value from 0 to 5 (In °F mode, 0 to 9) can be selected. When the desired figure is displayed, press the **[\*]** button to enter. The units digit will begin to flash.

#### c. Entering the units digit

- Press the **[▲]** or **[▼]** button to set the desired figure. Any value from 0 to 9 (In °F mode, same value can be selected.) When the desired figure is displayed, press the **[\*]** button to enter. The desired temperature is now entered into the system memory and heater control will begin with new offset value.

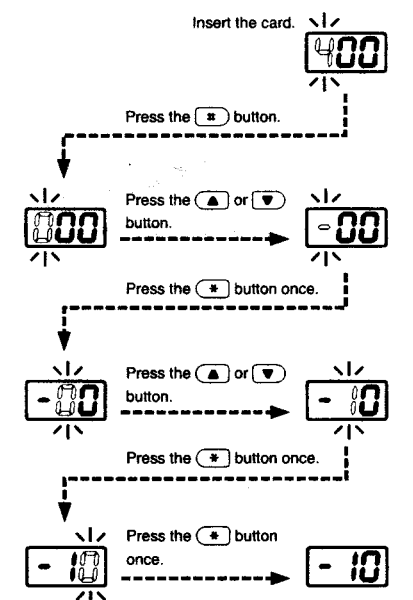

### NOTE:

When the unit is in offset-free mode, you can go into the offset value entry mode without control card by pressing the **[\*]** button for second.

When the station is ON and the card is in the station, the offset entry procedure follows:

1. Hold the **[\*]** button down for at least one second. The current offset value will be displayed, then the hundreds digit will begin to flash. This indicates that the station has entered the offset value input mode. Continue with the procedure of a - c, above.
2. When the **[\*]** button is pressed for less than one second, the current offset value is displayed for two seconds, then returns to tip temperature.

